 


Transmitter

**Dimensions** 



Receiver



# **Model Number**

# OBE10M-R2-SE0-L

Laser thru-beam sensor with 2 m fixed cable

 
#### **Features**

 
- Ultra-small housing design ٠
- DuraBeam Laser Sensors durable ٠ and employable like an LED
- 45° cable outlet for maximum ٠ mounting freedom under extremely tight space constraints
- Improvement in machine availability ٠ with abrasion-resistant, antistatic glass front

### **Product information**


The R2 series nano sensor has been developed for a broad range of applications. It offers excellent durability and is exceptionally easy to install. The housing is compact and, with its 45° cable outlet, can be installed in the smallest spaces. New functional principles and functionality open up a range of new options. The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor. The abrasion-resistant lens allows long operating times close to the moving object.

## **Electrical connection**





# Indicators/operating means

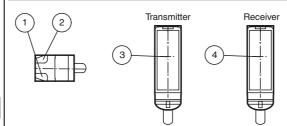

1	Operating display	green
2	Signal display	yellow
3	Emitter	
4	Receiver	

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com OBE10M-R2-SE0-L

Technical data			Laserlabel
System components			
Emitter		OBE10M-R2-L	
Receiver		OBE10M-R2-E0-L	
General specifications			CLASS 1 LASER
Effective detection range		0 10 m	PRODUCT
Threshold detection range		15 m	
Light source		laser diode	
Light type		modulated visible red light , 680 nm	
Laser nominal ratings			
Note		LASER LIGHT , DO NOT STARE INTO BEAM	CLASS 1
Laser class		1	LASER PRODUCT
Wave length		680 nm > 5 mrad	IEC 60825-1: 2007 certified.
Beam divergence Pulse length		approx. 3 μs	Complies with 21 CFR 1040.10 and 1040.11 except
Repetition rate		approx. 3 µ3	for deviations pursuant to Laser Notice No. 50,
max. pulse energy		9.5 nJ	dated June 24, 2007
Diameter of the light spot		approx. 20 mm at a distance of 10 m	
Angle of divergence		approx. 0.5 °	
Optical face		frontal	
Ambient light limit		EN 60947-5-2 : 30000 Lux	
Functional safety related para	meters		CLASS 1
MTTF <sub>d</sub>		806 a	LASER PRODUCT
Mission Time (T <sub>M</sub> )		20 a	
Diagnostic Coverage (DC)		0%	IEC 60825-1: 2007 certified
Indicators/operating means			Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to
Operation indicator		LED green, statically lit Power on , short-circuit : LED green flashing (approx. 4 Hz)	Laser Notice No. 50, dated June 24, 2007
Function indicator		Receiver: LED yellow, lights up when light beam is free, flashes when falling short of the stability control ; OFF when light beam	
		is interrupted	Accessories
Electrical specifications			
Operating voltage	UB	12 24 V	MH-R2-01
No-load supply current	Ι <sub>Ο</sub>	Emitter: ≤ 10 mA Receiver: ≤ 8 mA	Mounting aid for R2 series, Mounting bracket
Protection class		III	
Input			MH-R2-02
Test input		Test of switching function at 0 V	Mounting aid for R2 series, Mounting
Switching threshold		Teach-In input	bracket
Output			MUL DO 00
Switching type		NO contact	MH-R2-03
Signal output		1 NPN output, short-circuit protected, reverse polarity protected, open collector	Mounting aid for R2 series, Mounting
Switching voltage		max. 30 V DC	bracket
Switching current		max. 50 mA , resistive load	MH-R2-04
Voltage drop	U <sub>d</sub>	≤ 1.5 V DC	Mounting aid for R2 series, Mounting
Switching frequency	f	approx. 2 kHz	bracket
Response time	•	250 µs	bracket
Directive conformity			Other suitable accessories can be found at
Electromagnetic compatibility			www.pepperl-fuchs.com
Directive 2014/30/EU		EN 60947-5-2:2007 EN 60947-5-2/A1:2012	
Standard conformity			
Standards		EN 60947-5-2:2007 EN 60947-5-2/A1:2012 EN 60825-1:2007	
ola la l		UL 60947-5-2: 2014	
Ambient conditions			
Ambient temperature		-20 60 °C (-4 140 °F)	
Storage temperature		-30 70 °C (-22 158 °F)	
Mechanical specifications			
Housing width		7.5 mm	
Housing height		24 mm	
Housing depth		11.2 mm	
Degree of protection		IP67	
Connection		2 m fixed cable	
Material			
Housing		PC/ABS and TPU	
Optical face		glass	
Cable		PUR	
Installation		Fixing screws , 2 x M2 allen head screws included with delivery	
Mass		approx. 20 g Per sensor	
Cable length		2 m	
Approvals and contificates			
Approvals and certificates		E87056 all us Poogspized Close & Perver Course	
UL approval		E87056, cULus Recognized, Class 2 Power Source	

CCC approval

2

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com


CCC approval / marking not required for products rated  $\leq$ 36 V


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

#### FDA approval

IEC 60825-1:2007 Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

#### **Curves/Diagrams**

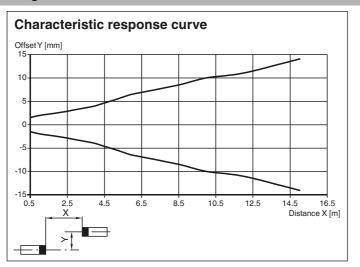

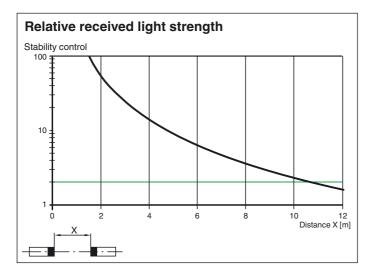

#### **Teach-In Methods**


The thru-beam sensor enables the switching points to be taught in for optimum adaptation to specific applications. This eliminates the need for additional components such as apertures.

 
The sensitivity of the thru-beam sensor can be adjusted using three Teach-in methods:

#### **Position Teach**

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- · The gain is set to an optimum value
- · The signal threshold is set to a minimum

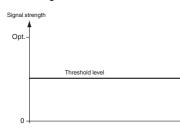



#### Recommended application:

This method enables minuscule particles in the beam path to be detected, and provides exceptional positioning accuracy. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.

- 1. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver.
- The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 2. Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 3. The end of the Teach-in process is indicated when the green LED indicator lights up static and yellow LED blinks.

#### Two-Point Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".				
Pepperl+Fuchs Group	USA: +1 330 486 0001	Germany: +49 621 776 1111	Singapore: +65 6779 9091	🗧 PE
www.pepperl-fuchs.com	fa-info@us.pepperl-fuchs.com	fa-info@de.pepperl-fuchs.com	fa-info@sg.pepperl-fuchs.com	



- The gain is set to an optimum value
- The signal threshold is set in the center between the two taught signal values

Signal s	strength		
Max			
	Teach-in value 1 (avg)	l	rs F
	Threshold level	<ul> <li>Contrast levels</li> </ul>	
	Teach-in value 2 (avg)	J	
0 -			
0	I	1	

- 1. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.
- Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 3. Position the object in the beam path.
- Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 5. The end of the Teach-in process is indicated when the green LED indicator lights up static.

#### Maximum Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to a maximum
- The signal threshold is set to a minimum

Signal strength	
Max-	
Threshold level	

Recommended application:

Enables an object to be detected with a high excess gain. This can be useful if there is severe environmental contamination or to achieve long operating times.

Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.

- 6. Cover the receiver or transmitter.
- Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- The end of the Teach-in process is indicated when the green LED indicator lights up static.

# Laser notice laser class 1

- The irradiation can lead to irritation especially in a dark environment. Do not point at people!
- Maintenance and repairs should only be carried out by authorized service personnel!
- Attach the device so that the warning is clearly visible and readable.
- The warning accompanies the device and should be attached in immediate proximity to the device.
- Caution Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

fa-info@us.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

4

www.pepperl-fuchs.com