









#### **Model Number**

#### OBE20M-R101-S2EP-IO-0,3M-V31-L

Laser thru-beam sensor with fixed cable and 4-pin, M8 connector

#### **Features**

- Miniature design with versatile mounting options
- DuraBeam Laser Sensors durable and employable like an LED
- IO-link interface for service and process data
- Various frequencies for avoiding mutual interference (cross-talk immunity)
- Extended temperature range -40°C ... 60°C
- High degree of protection IP69K


# **Product information**

The miniature optical sensors are the first devices of their kind to offer an end-to- end solution in a small single standard design — from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.


The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.


## **Dimensions**

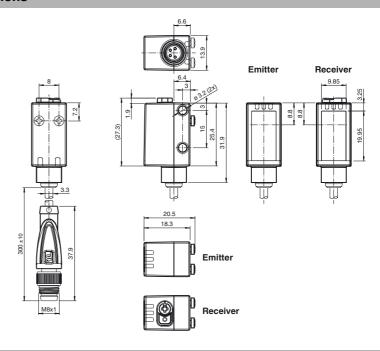

## **Electrical connection emitter**

 

# **Electrical connection receiver**

 

#### **Pinout**

Wire colors in accordance with EN 60947-5-2

 


BN	(brown)
WH	(white)
BU	(blue)
BK	(black)
	WH BU


Release date: 2018-12-17 14:03

# Indicators/operating means

#### **Emitter**



#### Receiver

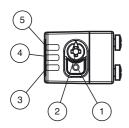

- Operating indicator
- Light-on/dark-on changeover switch
- Sensitivity adjuster
- 3 Operating indicator / light on
- 4 Signal indicator
- 5 Operating indicator / dark on

#### Laserlabel



### CLASS 1 LASER PRODUCT

IEC 60825-1: 2007 certified. Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

# CLASS 1 LASER PRODUCT

IEC 60825-1: 2007 certified. Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

#### **Accessories**

### IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

#### OMH-R101

Mounting Clamp

# **OMH-R101-Front**

Mounting Clamp

#### OMH-4.1

Mounting Clamp

# OMH-ML6

Mounting bracket

# OMH-ML6-U

Mounting bracket

## OMH-ML6-Z

Mounting bracket

#### V31-GM-2M-PUR

Female cordset, M8, 4-pin, PUR cable

# V31-WM-2M-PUR

Female cordset, M8, 4-pin, PUR cable

**PEPPERL+FUCHS** 


fa-info@us.pepperl-fuchs.com


www.pepperl-fuchs.com

#### **Ambient conditions**


Ambient temperature	-40 60 °C (-40 140 °F) , fixed cable -25 60 °C (-13 140 °F) , movable cable not appropriate for conveyor chains
Storage temperature	-40 70 °C (-40 158 °F)
Mechanical specifications	
Housing width	13.9 mm
Housing height	33.8 mm
Housing depth	18.3 mm
Degree of protection	IP67 / IP69 / IP69K
Connection	fixed cable 300 mm with M8 x 1 male connector; 4-pin
Material	
Housing	PC (Polycarbonate)
Optical face	PMMA
Mass	Emitter: approx. 10 g receiver: approx. 10 g
Cable length	0.3 m
Approvals and certificates	
UL approval	E87056, cULus Listed, class 2 power supply, type rating 1
FDA approval	IEC 60825-1:2007 Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

# **Curves/Diagrams**

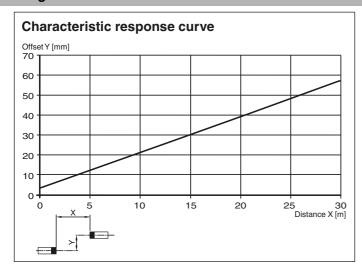

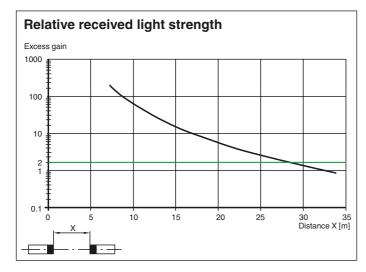

# **Functions and Operation**

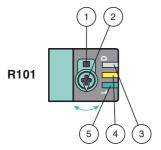

- 1 Light-on / dark-on changeover switch
- 2 Sensing range /sensitivity adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

To unlock the adjustment functions turn the sensing range adjuster for more than 180 degrees.

### Sensing Range / Sensitivity

Turn sensing range / sensivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range /sensivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

# Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on / dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

# **Restore Factory Settings**

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensivity adjustment is locked. In order to reactivate the sensing range / sensivity adjustment, turn the sensing range / sensivity adjuster for more than 180 degrees.