## Retroreflective sensor



CE 🚷 IO-Link

## **Model Number**

## OBG4000-R103-2EP-IO-0,3M-V31

Retroreflective sensor (glass) with fixed cable and 4-pin, M8 connector

#### **Features**

- Miniature design with versatile • mounting options
- Detects transparent objects, i.e., clear ٠ glass, PET and transparent films
- Two machines in one: clear object detection or reflection operating mode with long range
- High degree of protection IP69K
- IO-link interface for service and process data


## **Product information**

The R103 series miniature optical sensors are the first devices of their kind to offer an end-to-end solution in a small single standard design - from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The entire series enables sensors to communicate via IO-Link.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.

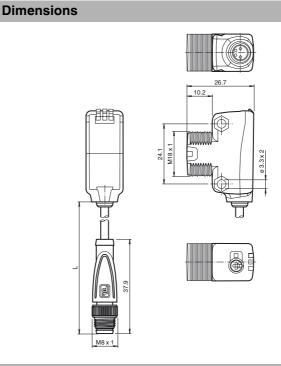




#### **Electrical connection**




#### Pinout



## Indicators/operating means





1	Teach-in button		
2	Mode rotary switch		
3	Operating indicator / dark on		
4	Signal indicator		
5	Operating indicator / light on		

Ν	Normal mode			
Ι	10 % contrast detection			
Ш	18 % contrast detection			
	40 % contrast detection			
L/D	D Switching type			
0	Keylock			

Pepperl+Fuchs Group www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com <sup>5</sup> PEPPERL+FUCHS 1

## **Technical data**

#### General specifications Effective detection range Reflector distance Threshold detection range Reference target Light source Light type LED risk group labelling Diameter of the light spot Angle of divergence Ambient light limit Functional safety related parameters MTTF<sub>d</sub>

Mission Time (T<sub>M</sub>) Diagnostic Coverage (DC) Indicators/operating means Operation indicator

Function indicator Control elements Control elements Contrast detection levels

**Electrical specifications** 

Operating voltage Ripple No-load supply current Protection class Interface Interface type Transfer rate **IO-Link Revision** Min. cycle time Process data witdh SIO mode support Device ID Compatible master port type Output

Switching type

#### Signal output

Switching voltage Switching current Usage category Voltage drop Switching frequency Response time Conformity Communication interface Product standard

Ambient conditions Ambient temperature

# Storage temperature

Optical face

Mechanical specifications Housing width Housing height Housing depth Degree of protection Connection Material Housing

www.pepperl-fuchs.com

0 ... 3.5 m in TEACH mode ; 0 ... 4 m at switch position "N" 0 ... 3.5 m in TEACH mode ; 0 ... 4 m at switch position "N" 5 m H85-2 reflector I FD modulated visible red light exempt group approx. 170 mm at a distance of 3.5 m approx. 5 °

#### 600 a 20 a 0% LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode Yellow I ED: Permanently lit - light path clear Permanently off - object detected Flashing (4 Hz) - insufficient operating reserve Teach-In key 5-step rotary switch for operating modes selection 10 % - clean, water filled PET bottles 18 % - clear glass bottles 40 % - colored glass or opaque materials Adjustable via rotary switch 10 ... 30 V DC

max. 10 % < 25 mA at 24 V supply voltage ш

UB

l<sub>0</sub>

Ud

f

EN 60947-5-2

IO-Link (via C/Q = pin 4) COM 2 (38.4 kBaud) 1.1 2.3 ms Process data input 2 Bit Process data output 2 Bit ves 0x110A03 (1116675) Α

The switching type of the sensor is adjustable. The default setting is: C/Q - Pin4: NPN normally open / dark-on, PNP normally closed / light-on, IO-Link /Q - Pin2: NPN normally closed / light-on, PNP normally open / dark-on 2 push-pull (4 in 1)outputs, short-circuit protected, reverse polarity protected, overvoltage protected max. 30 V DC max. 100 mA, resistive load DC-12 and DC-13  $\leq$  1.5 V DC 500 Hz 1 ms IEC 61131-9 EN 60947-5-2 -20 ... 60 °C (-4 ... 140 °F) , movable cable not appropriate for conveyor chains -40 ... 70 °C (-40 ... 158 °F) 15 mm 36.5 mm 26.7 mm IP67 / IP69 / IP69K fixed cable 300 mm with M8 x 1 male connector; 4-pin

## Accessories

IO-Link-Master02-USB IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

OMH-R103-01 Mounting bracket

V31-GM-2M-PUR Female cordset, M8, 4-pin, PUR cable

V31-WM-2M-PUR Female cordset, M8, 4-pin, PUR cable

OFR-100/100 Reflective tape 100 mm x 100 mm

REF-H33 Reflector with screw fixing

REF-H50 Reflector, rectangular 51 mm x 61 mm, mounting holes, fixing strap

**REF-H85-2** Reflector, rectangular 84.5 mm x 84.5 mm, mounting holes

## REF-H32G-2

## REF-ORR50G-2

OMH-R101-Front Mounting Clamp

**OMH-R101** Mounting Clamp

**OMH-4.1** Mounting Clamp

OMH-ML6 Mounting bracket

OMH-ML6-U Mounting bracket

OMH-ML6-Z Mounting bracket

Other suitable accessories can be found at www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

PC (Polycarbonate)

PMMA

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

Mass	
Cable length	


UL approval

approx. 17 g 0.3 m


#### Approvals and certificates

E87056, cULus Listed, class 2 power supply, type rating 1

#### **Curves/Diagrams**

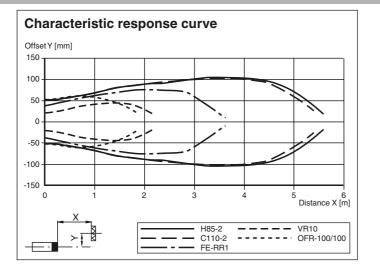

#### Relative received light strength

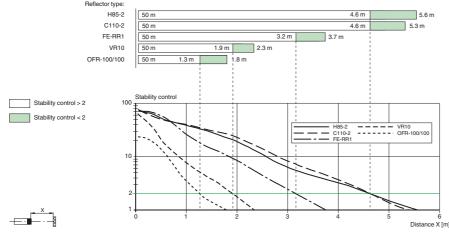

## Settings Teach-in:

Use the rotary switch to select the required operating mode: Normal mode (N) or contrast level I - III.

To teach in a threshold or activate an operating mode, press the "TI" button until the yellow and green LEDs flash in phase (approx. 1 s).

Release the "TI" button. Teach-in starts.

Successful teach-in is indicated by alternating flashing (2.5 Hz) of the yellow and green LEDs. The sensor will now operate in the selected operating mode with the taught-in threshold.

An unsuccessful teach-in is indicated by rapidly alternating flashing (8 Hz) of the yellow and green LEDs. After an unsuccessful teach-in, the sensor continues to operate with the previous valid setting after the relevant visual fault signal is issued.

Every taught-in switching threshold can be re-taught (overwritten) by pressing the "TI" button again.

Note: To ensure that the device functions reliably in Contrast mode, the device must be powered on at least 30 s before Teach-in.

Setting the Device to Maximum Sensitivity

Use the rotary switch to select the Normal mode (N) position.

Press the "TI" button for > 4 s. The yellow and green LEDs will go out.

Release the "TI" button.

The settings will be reset to maximum sensitivity. After successfully resetting, the yellow and green LEDs will flash alternately (2.5 Hz).

Switching between light on/dark on

Use the rotary switch to select the light on/dark on (L/D) position.

Press the "TI" button for > 1 s.

The respective operating indicator LED (L/D) will illuminate green and the switching type will change.

To reset the switching type, press the "TI" button for > 4 s.

The respective operating indicator LED (L/D) will illuminate green and the operating indicator will be reset to the most recently active switching

Refer to "General Notes Relating to PepperI+Fuchs Product Information".									
Pepperl+Fuchs Group	USA: +1 330 486 0001	Germany: +49 621 776 1111	Singapore: +65 6779 9091	EPPPERL+FUCHS					
www.pepperl-fuchs.com	fa-info@us.pepperl-fuchs.com	fa-info@de.pepperl-fuchs.com	fa-info@sg.pepperl-fuchs.com						

## OBG4000-R103-2EP-IO-0,3M-V31

3

type.

## **Reset to Default Settings**

Use the rotary switch to select the O position. Press the "TI" button for > 10 s. The yellow and the green LEDs will both switch off. Release the "TI" button. The yellow LED is on. After resetting, the sensor will operate with the following default settings:

- Normal mode (N)
- Maximum sensitivity adjustment
- Dark on
- Pin 2 (white core): antivalent switching output

www.pepperl-fuchs.com