





(€





### **Model Number**

### OBT350-R101-2EP-IO-0,3M-V1-1T

Triangulation sensor (BGE) with fixed cable and M12 connector, 4-pin

#### **Features**

- Miniature design with versatile mounting options
- Secure and gapless detection, even near the surface through background evaluation
- Precision object detection, almost irrespective of the color
- Extended temperature range -40°C ... 60°C
- High degree of protection IP69K
- IO-link interface for service and process data


# **Product information**

The miniature optical sensors are the first devices of their kind to offer an end-to- end solution in a small single standard design from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.


The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.

### **Dimensions**

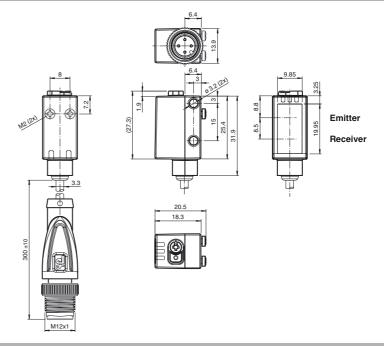

## **Electrical connection**




### **Pinout**

Wire colors in accordance with EN 60947-5-2

BN WH BU BK (brown (white) (blue) (black)

# Indicators/operating means

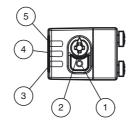

- Light-on/dark-on changeover switch
- Sensing range adjuster
- 3 Operating indicator / dark on
- Signal indicator
- Operating indicator / light on

#### **Technical data General specifications** 5 ... 350 mm Detection range 5 ... 25 mm Detection range min. 5 ... 350 mm Detection range max. Adjustment range 25 ... 350 mm standard white, 100 mm x 100 mm Reference target Light source Light type modulated visible red light LED risk group labelling exempt group Black/White difference (6 %/90 %) < 15 % at 350 mm Diameter of the light spot approx. 20 mm at a distance of 350 mm Angle of divergence approx. 3 Ambient light limit EN 60947-5-2: 40000 Lux Functional safety related parameters $MTTF_d$ 600 a Mission Time $(T_M)$ 20 a Diagnostic Coverage (DC) 0 % Indicators/operating means Operation indicator LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode Function indicator constantly on - background detected (object not detected) constantly off - object detected Control elements Light-on/dark-on changeover switch Control elements Sensing range adjuster **Electrical specifications** Operating voltage UR 10 ... 30 V DC Ripple max. 10 % No-load supply current < 25 mA at 24 V supply voltage Protection class Interface IO-Link (via C/Q = pin 4) Interface type Device profile Smart Sensor COM 2 (38.4 kBaud) Transfer rate **IO-Link Revision** 1.1 Min. cycle time 2.3 ms Process data witdh Process data input 1 Bit Process data output 2 Bit SIO mode support 0x110701 (1115905) Device ID Compatible master port type Output Switching type The switching type of the sensor is adjustable. The default setting is: C/Q - Pin4: NPN normally open / dark-on, PNP normally closed / light-on, IO-Link /Q - Pin2: NPN normally closed / light-on, PNP normally open / Signal output 2 push-pull (4 in 1)outputs, short-circuit protected, reverse polarity protected, overvoltage protected Switching voltage max 30 V DC max. 100 mA, resistive load Switching current DC-12 and DC-13 Usage category ≤ 1.5 V DC Voltage drop Switching frequency f 500 Hz Response time 1 ms Conformity Communication interface IEC 61131-9 EN 60947-5-2 Product standard **Ambient conditions** Ambient temperature -40 ... 60 °C (-40 ... 140 °F) , fixed cable -25 ... 60 °C (-13 . .. 140 °F) , movable cable not appropriate for conveyor chains Storage temperature -40 ... 70 °C (-40 ... 158 °F) **Mechanical specifications** Housing width 13.9 mm Housing height 33.8 mm Housing depth 18.3 mm IP67 / IP69 / IP69K Degree of protection Connection 300 mm fixed cable with M12 x 1, 4-pin connector Material Housing PC (Polycarbonate) Optical face **PMMA** Mass approx. 17 g

#### **Accessories**

#### IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

## V1-G-2M-PUR

Female cordset, M12, 4-pin, PUR cable

## V1-W-2M-PUR

Female cordset, M12, 4-pin, PUR cable

#### V31-GM-2M-PUR

Female cordset, M8, 4-pin, PUR cable

#### V31-WM-2M-PUR

Female cordset, M8, 4-pin, PUR cable

Other suitable accessories can be found at www.pepperl-fuchs.com


0.3 m

Cable length


#### Approvals and certificates

**UL** approval

E87056, cULus Listed, class 2 power supply, type rating 1

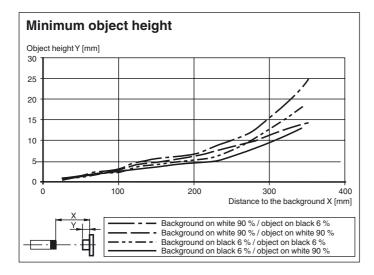

## **Functions and Operation**

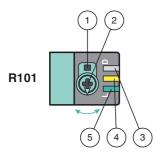

- 1 Light-on / dark-on changeover switch
- 2 Sensing range /sensitivity adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

To unlock the adjustment functions turn the sensing range adjuster for more than 180 degrees.

# Sensing Range / Sensitivity

Turn sensing range / sensivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range /sensivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

# **Light-on / Dark-on Configuration**

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on / dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

## **Restore Factory Settings**

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensivity adjustment is locked. In order to reactivate the sensing range / sensivity adjustment, turn the sensing range / sensivity adjuster for more than 180 degrees.

www.pepperl-fuchs.com