
# Automatic switching function of 5 point temperature indication


#### Features

- Indication type only
- High accuracy measurement: F.S. ±0.5%
- 5 Point temperature measurement
- Automatic or manual display of temperature in each point



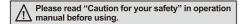


## Ordering information

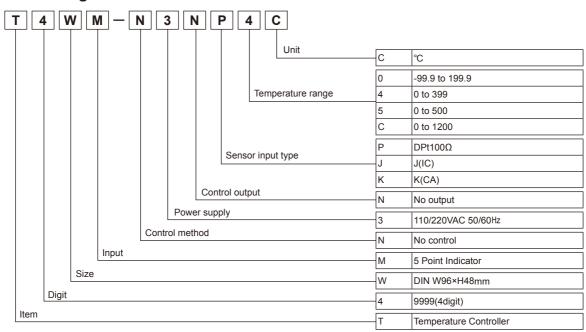

X Please check the range of temperature when select model.

# ■ Temperature range for each sensor

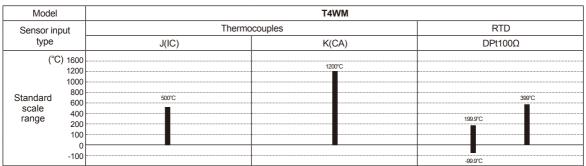

H-132 Autonics

## Specifications


Series		T4WM	
Power supply		110/220VAC 50/60Hz	
Allowable voltage range		90 to 110% of rated voltage	
Power consumption		Max. 3VA	
Display method		7 Segment(red) LED method	
Character size(W×H)		9.8×14.2mm	
Display accuracy		F.S. ±0.5% rdg ±1digit	
Input sensor		Thermocouples : K(CA), J(IC) / RTD: DPt100Ω	
Input line resistance		Thermocouples: Max. $100\Omega$ / RTD: Allowable line resistance max. $5\Omega$ per a wire	
Connectable sensors		5EA(thermocouple, RTD are not used as mixed)	
Channel switch		Selectable Auto/Manual switching	
Auto switching time		Variable 1 to 10 sec.(by built-in VR)	
Insulation resistance		Min. 100MΩ(at 500VDC megger)	
Dielectric strength		2,000VAC 50/60Hz for 1 min.	
Noise strength		±1kV the square wave noise(pulse width: 1μs) by the noise simulator	
Vibration	Mechanical	0.75mm amplitude at frequency of 10 to 55Hz(for 1 min.) in each of X, Y, Z directions for 1 hour	
	Malfunction	0.5mm amplitude at frequency of 10 to 55Hz(for 1 min.) in each of X, Y, Z directions for 10 min.	
Shock	Mechanical	300m/s²(approx. 30G) in each of X, Y, Z directions for 3 times	
	Malfunction	100m/s²(approx. 10G) in each of X, Y, Z directions for 3 times	
	Ambient temperature	-10 to 50°C, storage:-25 to 65°C	
	Ambient humidity	35 to 85%RH, storage: 35 to 85%RH	
Unit weight		Approx. 322g	

XEnvironment resistance is rated at no freezing or condensation.



### Connections

%RTD: DPt100 $\Omega$ (3-wire type) %Thermocouple: K, J

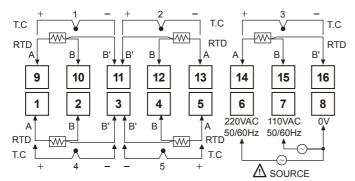

(A) Photo electric sensor

(B) Fiber optic sensor

(C) Door/Area sensor

(D) Proximity sensor

(E) Pressure sensor

(F) Rotary encoder

(G) Connector/

(H) Temp. controller

(I) SSR/ Power controller

(J) Counter

.) anel

(M) Tacho/ Speed/ Pulse meter

(N) Display unit

(O) Sensor

(P) Switching mode power supply

(Q) Stepper motor& Driver&Controller

(R) Graphic/ Logic panel


(S) Field network device

> (T) Software

(U) Other

Autonics H-133

### Dimensions

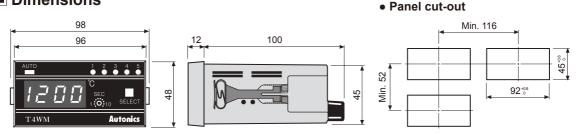

## Channel switching

### Auto/Manual channel switching

Auto switching	Select switch	Manual swithcing
When pressing this for 3sec. and the channel auto switching indicator turns ON and channels switch automatically. (AUTO LED: ON)	SEI	When press this once, the channel indicator turns ON and channels switch manually (AUTO LED: OFF)


#### Auto channel switching

- The temperature of each channel is displayed during auto switching time and switching to the next channel automatically.
- Auto switching time is variable up to 10 sec. by the front VP
- When it is auto channel switching, the channel auto switching indicator turns ON.

#### Manual channel switching

Whenever touching selection switch(SELECT), channel switches.

When a channel indicator turns ON, the temperature of the channel is displayed and whenever touching the switch, it moves to next channel.

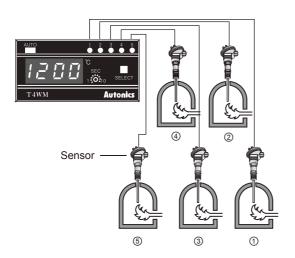

# Selection of input sensor number by internal DIP switch

(unit: mm)

Max. 5 different sensors can be connected but do not use thermocouple and Pt100 $\Omega$  together.

Sensor	2	3	4	5
DIP	3 2 1	3 2 1	3 2 1	3 2 1
switch	ON	ON	ON OFF	ON OFF

## **■** Memory protection

When the power fails, the data value will be protected for 3 months. (The battery must be charged fully.)

H-134 Autonics