







Transmitter Receiver

# **Model Number**

# OBE10M-R2-SE2-0,2M-V31-L

Laser thru-beam sensor with fixed cable and 4-pin, M8 connector

# **Features**

- Ultra-small housing design ٠
- DuraBeam Laser Sensors durable ٠ and employable like an LED
- 45° cable outlet for maximum mounting freedom under extremely tight space constraints
- Improvement in machine availability ٠ with abrasion-resistant, antistatic glass front

# **Product information**

The R2 series nano sensor has been developed for a broad range of applications. It offers excellent durability and is exceptionally easy to install. The housing is compact and, with its 45° cable outlet, can be installed in the smallest spaces. New functional principles and functionality open up a range of new options. The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor. The abrasion-resistant lens allows long operating times close to the moving object.


# **Electrical connection**



# **Pinout**



# Indicators/operating means

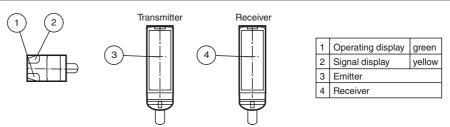

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com <sup>5</sup> PEPPERL+FUCHS 1

			Laserlabel
System components			
Emitter		OBE10M-R2-0,2M-V31-L	
Receiver		OBE10M-R2-E2-0.2M-V31-L	
General specifications		, -	CLASS 1
Effective detection range		0 10 m	LASER
, i i i i i i i i i i i i i i i i i i i		15 m	PRODUCT
Threshold detection range			
Light source		laser diode	
Light type		modulated visible red light , 680 nm	
Laser nominal ratings			
Note		LASER LIGHT , DO NOT STARE INTO BEAM	CLASS 1
Laser class		1	LASER PRODUCT
Wave length		680 nm	IEC 60825-1: 2007 certified.
Beam divergence		> 5 mrad	Complies with 21 CFR
Pulse length		approx. 3 µs	1040.10 and 1040.11 except for deviations pursuant to
Repetition rate		approx. 16.6 kHz	Laser Notice No. 50,
max. pulse energy		9.5 nJ	dated June 24, 2007
Diameter of the light spot		approx. 20 mm at a distance of 10 m	
Angle of divergence		approx. 0.5 °	
0 0			
Optical face		frontal	
Ambient light limit		EN 60947-5-2 : 30000 Lux	
Functional safety related paraget	meters		CLASS 1
MTTF <sub>d</sub>		806 a	
Mission Time (T <sub>M</sub> )		20 a	
Diagnostic Coverage (DC)		0%	IEC 60825-1: 2007 certified. Complies with 21 CFR 1040.10 and
Indicators/operating means			1040.11 except for deviations pursuant to
Operation indicator		LED green, statically lit Power on , short-circuit : LED green	Laser Notice No. 50, dated June 24, 2007
Function indicator		Receiver: LED yellow, lights up when light beam is free, flashes	
I unction indicator		when falling short of the stability control ; OFF when light beam is interrupted	
Electrical specifications			Accessories
Operating voltage	UB	12 24 V	V31-WM-2M-PUR
	_	Emitter: $\leq 10 \text{ mA}$	
No-load supply current	Ι <sub>Ο</sub>	Receiver: ≤ 8 mA	Female cordset, M8, 4-pin, PUR cable
Protection class		11	MH-R2-01
Input			Mounting aid for R2 series, Mounting
Test input		Test of switching function at 0 V	bracket
Switching threshold		Teach-In input	
Output			MH-R2-02
Switching type		NO contact	Mounting aid for R2 series, Mounting
Signal output		1 PNP output, short-circuit protected, reverse polarity protected, open collector	bracket
Switching voltage		max. 30 V DC	MH-R2-03
Switching current		max. 50 mA , resistive load	Mounting aid for R2 series, Mounting
-		≤ 1.5 V DC	bracket
Voltage drop	U <sub>d</sub>		Diacket
Switching frequency	f	approx. 2 kHz	MH-R2-04
Response time		250 µs	-
Directive conformity			Mounting aid for R2 series, Mounting
Electromagnetic compatibility			bracket
Directive 2014/30/EU		EN 60947-5-2:2007 EN 60947-5-2/A1:2012	Other suitable accessories can be found a
Standard conformity			
Standards		EN 60947-5-2:2007 EN 60947-5-2/A1:2012 EN 60825-1:2007 UL 60947-5-2: 2014	www.pepperl-fuchs.com
Ambient conditions		· · ·	
		20 60 °C ( 4 140 °E)	
Ambient temperature		-20 60 °C (-4 140 °F)	
Storage temperature		-30 70 °C (-22 158 °F)	
Mechanical specifications			
Housing width		7.5 mm	
Housing height		24 mm	
Housing depth		11.2 mm	
Degree of protection		IP67	
Connection		200 mm fixed cable with 4-pin, M8x1 connector	
Material		Los mininted duble with +-pin, work roomledion	
		DC/ARS and TRU	
Housing		PC/ABS and TPU	
Optical face		glass	
Cable		PUR	
Installation		Fixing screws , 2 x M2 allen head screws included with delivery	
Mass		approx. 10 g Per sensor	
Cable length		200 mm	
····			
Approvals and cartificates			
Approvals and certificates			
		E87056 , cULus Recognized, Class 2 Power Source	
UL approval CCC approval		E87056 , cULus Recognized, Class 2 Power Source CCC approval / marking not required for products rated ≤36 V	

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com


Release date: 2017-03-02 15:06 Date of issue: 2019-05-16 282046\_eng.xml

#### FDA approval

IEC 60825-1:2007 Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

# **Curves/Diagrams**

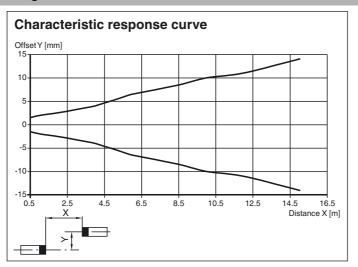

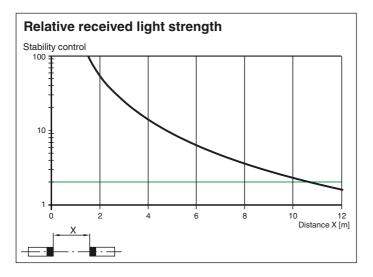

### **Teach-In Methods**


The thru-beam sensor enables the switching points to be taught in for optimum adaptation to specific applications. This eliminates the need for additional components such as apertures.

The sensitivity of the thru-beam sensor can be adjusted using three Teach-in methods:

#### **Position Teach**

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- · The gain is set to an optimum value
- · The signal threshold is set to a minimum

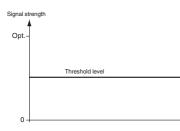



#### Recommended application:

This method enables minuscule particles in the beam path to be detected, and provides exceptional positioning accuracy. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.

- 1. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver.
- The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 2. Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 3. The end of the Teach-in process is indicated when the green LED indicator lights up static and yellow LED blinks.

## Two-Point Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

Refer to "General Notes Relating to PepperI+Fuchs Product Information".							
Pepperl+Fuchs Group	USA: +1 330 486 0001	Germany: +49 621 776 1111	Singapore: +65 6779 9091	🕫 PE			
www.pepperl-fuchs.com	fa-info@us.pepperl-fuchs.com	fa-info@de.pepperl-fuchs.com	fa-info@sg.pepperl-fuchs.com				



- · The gain is set to an optimum value
- · The signal threshold is set in the center between the two taught signal values

Signal st	rength		
Max. –			
	Teach-in value 1 (avg)	1	
	Threshold level	> Contrast levels	
	Teach-in value 2 (avg)	J	
0		<b>►</b>	

- 1. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.
- Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 3. Position the object in the beam path.
- Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 5. The end of the Teach-in process is indicated when the green LED indicator lights up static.

### Maximum Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to a maximum
- The signal threshold is set to a minimum

Signal strength Max			
0	d level	-	

Recommended application:

Enables an object to be detected with a high excess gain. This can be useful if there is severe environmental contamination or to achieve long operating times.

Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.

- 6. Cover the receiver or transmitter.
- Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- The end of the Teach-in process is indicated when the green LED indicator lights up static.

## Laser notice laser class 1

- The irradiation can lead to irritation especially in a dark environment. Do not point at people!
- Maintenance and repairs should only be carried out by authorized service personnel!
- Attach the device so that the warning is clearly visible and readable.
- The warning accompanies the device and should be attached in immediate proximity to the device.
- Caution Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Germany: +49 621 776 1111 Si fa-info@de.pepperl-fuchs.com fa-info

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

4

www.pepperl-fuchs.com