



Model Number

OBE2000-R3-SE0

Thru-beam sensor with 2 m fixed cable


Features

- 45° cable outlet for maximum mounting freedom under extremely tight space constraints
- Improvement in machine availability with abrasion-resistant, antistatic glass front
- Extremely large detection range in Long Range Mode
- Option of switching to high precision mode for greater switching accuracy


Product information

The nano sensor has been developed for a broad range of applications. It offers excellent durability and is exceptionally easy to install. The housing is compact and, with its 45° cable outlet, can be installed in the smallest spaces. New functional principles and functionality open up a range of new options. The abrasion-resistant lens allows long operating times close to the moving object.


Dimensions

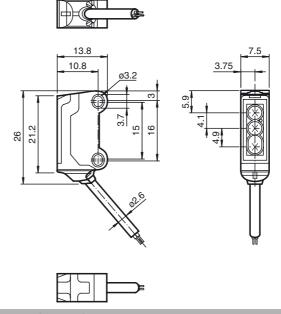


Electrical connection emitter

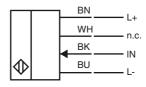

Electrical connection receiver

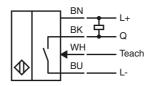

Indicators/operating means

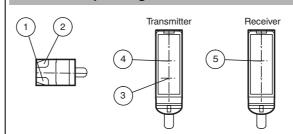

	1	Operating display	green
	2	Signal display	yellow
	3	Emitter long range	
	4	Emitter high precision	
	5	Receiver	

Thru-beam sensor


Technical data


Other suitable accessories can be found at www.pepperl-fuchs.com


R3
R3-E0
e mode: 0 2 m sion mode: 0 200 mm
e mode: 2.5 m sion mode: 300 mm
visible red light, 630 nm
e mode: 150 mm at a distance of 2000 mm High prec : 0.5 mm at a distance of 50 mm
5-2 : 30000 Lux
, statically lit Power on , short-circuit : LED green flas ox. 4 Hz)
.ED yellow, lights up when light beam is free, flashes g short of the stability control; OFF when light beam ed
DC , class 2
I1 mA ≤ 8 mA
ection BK: not connected, Long Range mode BK: 0 V cion Mode
put
t
out, short-circuit protected, reverse polarity protected optor
DC
A, resistive load
0 Hz
C (-13 140 °F)
C (-22 158 °F)
able
nd TPU
« Dou concer
g Per sensor
5-2:2007
cognized, Class 2 Power Source
roval / marking not required for products rated ≤36 V

Release date: 2017-07-17 13:45 Date of issue: 2017-07-17 269693_eng.xml


Curves/Diagrams

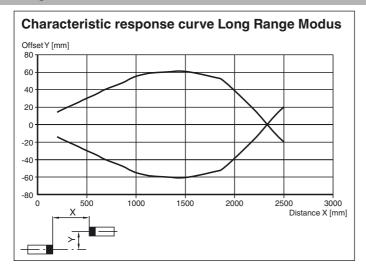


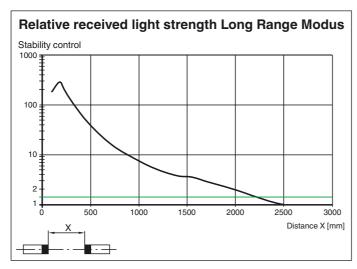

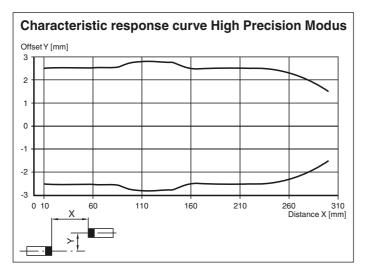

www.pepperl-fuchs.com

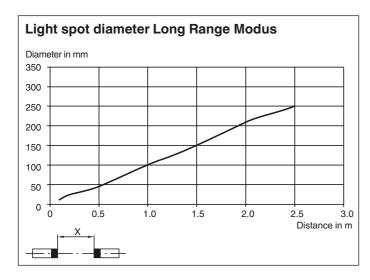

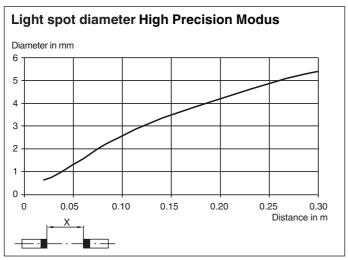

Teach-In Methods

The thru-beam sensor enables the switching points to be taught in for optimum adaptation to specific applications. This eliminates the need for additional components such as apertures.

Essentially, all Teach-in methods can be used in both "High Precision" and "High Power" operating modes.


The sensitivity of the thru-beam sensor can be adjusted using three Teach-in methods:

Position Teach

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to an optimum value
- The signal threshold is set to a minimum



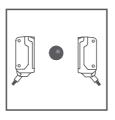

Recommended application:

This method enables extremely small differences in contrast to be detected, as well as minuscule particles in the beam path, and provides exceptional positioning accuracy.


The best results are achieved in "High Precision" mode.


- 1. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.
- 2. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 3. Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 4. The end of the Teach-in process is indicated when the green LED indicator lights up sold and yellow LED blinks.

Two-Point Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to an optimum value
- · The signal threshold is set in the center between the two taught signal values

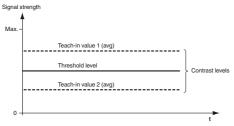

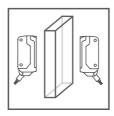

Recommended application:

Enables detection of transparent objects.

The best results are achieved in "High Precision" mode.

- 1. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.
- 2. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 3. Position the object in the beam path.
- 4. Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 5. The end of the Teach-in process is indicated when the green LED indicator lights up sold.

Maximum Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to a maximum
- The signal threshold is set to a minimum





Recommended application:

Enables an object to be detected with a high excess gain. This can be useful if there is severe environmental contamination or to achieve long operating times.

The best results are achieved in "High Precision" mode.

- 1. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.
- 2. Cover the receiver or transmitter.
- Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver.
 The green and yellow LED indicators flash simultaneously at 2.5 Hz
- Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver.
 The green and yellow LED indicators flash alternately at 2.5 Hz
- 5. The end of the Teach-in process is indicated when the green LED indicator lights up sold.

269693 eng.xml