Thru-beam sensor

OBE500-R2F-SE0-Y253561



c **A** us CE


Model Number

OBE500-R2F-SE0-Y253561

Thru-beam sensor (pair) with 2 m fixed cable

Features

- Very flat design for direct mounting ٠ without mounting bracket
- TEACH-IN ٠
- Detection of partially transparent • objects by teach-in
- Very bright, highly visible light spot •

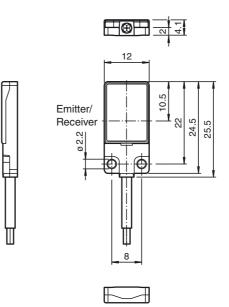

Electrical connection



Dimensions



Pepperl+Fuchs Group www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

Other suitable accessories can be found at www.pepperl-fuchs.com

Technical data		
System components		
Emitter		OBE500-R2F-S
Receiver		OBE500-R2F-E0-Y813034
General specifications		
Effective detection range		0 500 mm
Threshold detection range		700 mm
Light source		LED
Light type		modulated visible red light , 630 nm
LED risk group labelling		exempt group
Angle deviation		approx. 2 °
Object size		typ. starts from 1.5 mm
Diameter of the light spot		approx. 60 mm at a distance of 500 mm
Angle of divergence		approx. 5 °
Optical face		frontal
Ambient light limit		EN 60947-5-2 : 25000 Lux
Functional safety related param	eters	
MTTF _d		806 a
Mission Time (T _M)		20 a
Diagnostic Coverage (DC)		0 %
Indicators/operating means		
Operation indicator		LED green, statically lit Power on , short-circuit : LED green flashing (approx. 4 Hz)
Function indicator		Receiver: LED yellow, lights up when light beam is free, flashes when falling short of the stability control; OFF when light beam is interrupted
Electrical specifications		
Operating voltage	UB	10 30 V DC
No-load supply current	I ₀	< 10 mA
Protection class		III
Input		
Test input		Test of switching function at 0 V
Switching threshold		Teach-In input
Output		
Switching type		NO contact / dark on
Signal output		1 NPN output, short-circuit protected, reverse polarity protected, open collector
Switching voltage		max. 30 V DC
Switching current		max. 50 mA , resistive load ≤ 1.5 V DC
Voltage drop Switching frequency	U _d f	approx. 1 kHz
Response time	1	appiox. τ κπz 500 μs
Directive conformity		500 µ3
Electromagnetic compatibility		
Directive 2014/30/EU		EN 60947-5-2:2007 EN 60947-5-2/A1:2012
Standard conformity		
Standards		EN 60947-5-2:2007 EN 60947-5-2/A1:2012 EN 62471:2008 UL 60947-5-2: 2014
Ambient conditions		
Ambient temperature		-20 60 °C (-4 140 °F)
Storage temperature		-20 70 °C (-4 158 °F)
Mechanical specifications		
Housing width		12 mm
Housing height		25.5 mm
Housing depth		4.1 mm
Degree of protection		IP67
Connection		2 m fixed cable
Material		
Housing		PC (Polycarbonate) and Stainless steel
Optical face		PMMA
Cable Mass		PUR approx 20 g Per sensor
Tightening torque, fastening scre	WS	approx. 20 g Per sensor 0.25 Nm
Cable length	ws	2 m
Approvals and certificates		
UL approval		E87056, cULus Recognized, Class 2 Power Source
CCC approval		CCC approval / marking not required for products rated ≤36 V
CCC approval		ccc approval / marking not required for products rated ≤36 V

Release date: 2017-02-16 13:18 Date of issue: 2019-05-16 253661_eng.xml


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com


 Perfer to "General Notes Relating to Pepperl+Fuchs Product Information".


 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 Germany: +49 621 776 1111

 www.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com
 Germany: +49 621 776 1111

Curves/Diagrams

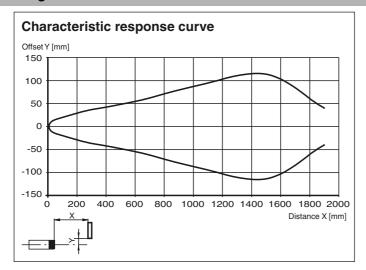

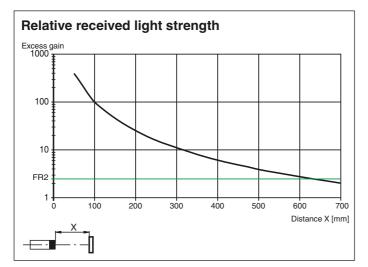

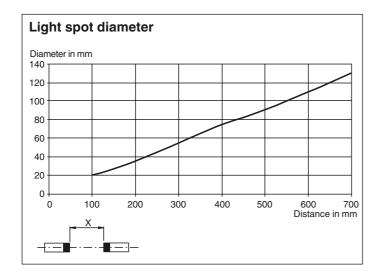

Teach-In Methods

The thru-beam sensor enables the switching points to be taught in for optimum adaptation to specific applications. This eliminates the need for additional components such as apertures.

The sensitivity of the thru-beam sensor can be adjusted using three Teach-in methods:

Position Teach

When using this Teach-in method, the following settings are made on the thru-beam sensor:


- The gain is set to an optimum value
- The signal threshold is set to a minimum

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091

gnal st	trength	
Opt		
	Threshold level	
0 -		

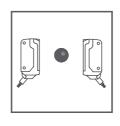

Recommended application:

s

This method enables minuscule particles in the beam path to be detected, and provides exceptional positioning accuracy. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.

- 1. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 3. The end of the Teach-in process is indicated when the green LED indicator lights up static and yellow LED blinks.

Two-Point Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

The gain is set to an optimum value

The signal threshold is set in the center between the two taught signal values

Signal s	strength		
Max	Teach-in value 1 (avg)		rg Men
	Threshold level	Contrast levels	
	Teach-in value 2 (avg)		
0 -		►	
		t	

- 1. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.
- Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 3. Position the object in the beam path.
- Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 5. The end of the Teach-in process is indicated when the green LED indicator lights up static.

Maximum Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to a maximum
- The signal threshold is set to a minimum

Signal strength Max	
Threshold level	

Recommended application:

Enables an object to be detected with a high excess gain. This can be useful if there is severe environmental contamination or to achieve long operating times.

Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.

6. Cover the receiver or transmitter.

www.pepperl-fuchs.com

- 7. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 8. Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 9. The end of the Teach-in process is indicated when the green LED indicator lights up static.

fa-info@us.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com