
Laser thru-beam sensor

Dimensions





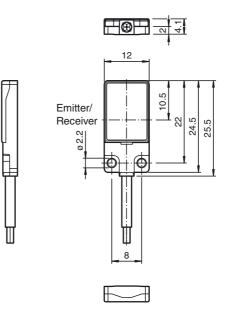


Model Number

OBE500-R2F-SE2-L

Laser thru-beam sensor with 2 m fixed cable

Features

- Very flat design for direct mounting ٠ without mounting bracket
- DuraBeam Laser Sensors durable ٠ and employable like an LED
- TEACH-IN •
- Detection of partially transparent objects by teach-in
- Detection of small parts or flat objects ٠ from 0.25 mm





ΒN wн Teach вк - Q 中 BU ⊅ - L-

Pepperl+Fuchs Group www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

EPPPERL+FUCHS 1

Technical data			Laserlabel
System components			
Emitter		OBE500-R2F-S-L	
Receiver		OBE500-R2F-E2-L	
General specifications			CLASS 1
Effective detection range		0 500 mm	LASER PRODUCT
Threshold detection range		700 mm	
Light source		LASER LIGHT	
Light type		modulated visible red light , 680 nm	
Laser nominal ratings			CLASS 1
Note		LASER LIGHT , DO NOT STARE INTO BEAM	LASER PRODUCT
Laser class		1	IEC 60825-1: 2007 certified. Complies with 21 CFR
Wave length		680 nm	1040.10 and 1040.11 except for deviations pursuant to
Beam divergence		> 5 mrad	Laser Notice No. 50,
Pulse length		approx. 3 µs	dated June 24, 2007
Repetition rate		approx. 16.6 kHz	
max. pulse energy		8 nJ	
Angle deviation		approx. 0.5 °	
Object size		typ. starts from 0.5 mm; typ. from 0.25 mm (after teach-in)	
Diameter of the light spot		approx. 3 mm at a distance of 500 mm	CLASS 1
Angle of divergence		approx. 1 °	LASER PRODUCT
Optical face Ambient light limit		frontal EN 60947-5-2 : 25000 Lux	IEC 60825-1: 2007 certified.
-		EN 60947-5-2 : 25000 Lux	Complies with 21 CFR 1040.10 and
Functional safety related paramet	ters	806 a	1040 11 except for deviations pursuant to
MTTF _d Mission Time (T_)			Laser Notice No. 50, dated June 24, 2007
Mission Time (T _M)		20 a 0 %	
Diagnostic Coverage (DC)		0 %	
Indicators/operating means		LED groop, statically lit Power on short sirewity LED groop	Other suitable accessories can be found
Operation indicator		LED green, statically lit Power on , short-circuit : LED green flashing (approx. 4 Hz)	www.pepperl-fuchs.com
Function indicator		Receiver: LED yellow, lights up when light beam is free, flashes when falling short of the stability control; OFF when light beam	
Electrical apositiontions		is interrupted	
Electrical specifications		12 24 V	
	U _B	Emitter: \leq 10 mA	
Protection class	I ₀	Receiver: ≤ 8 mA	
		III	
Input		Test of quitables function at 0.1/	
Test input		Test of switching function at 0 V	
Switching threshold		Teach-In input	
Output		NO contact / dark on	
Switching type Signal output		1 PNP output, short-circuit protected, reverse polarity protected,	
Signal Suput		open collector	
Switching voltage		max. 30 V DC	
Switching current		max. 50 mA , resistive load	
ç	Ud	≤ 1.5 V DC	
	f	approx. 2 kHz	
Response time		250 μs	
Directive conformity			
Electromagnetic compatibility			
Directive 2014/30/EU		EN 60947-5-2:2007 EN 60947-5-2/A1:2012	
Standard conformity			
Standards		EN 60947-5-2:2007 EN 60947-5-2/A1:2012 EN 60825-1:2007	
		UL 60947-5-2: 2014	
Ambient conditions			
Ambient temperature		-10 60 °C (14 140 °F)	
Storage temperature		-20 70 °C (-4 158 °F)	
Mechanical specifications			
Housing width		12 mm	
Housing height		25.5 mm	
Housing depth		4.1 mm	
Degree of protection		IP67	
Connection		2 m fixed cable	
Material			
Housing		PC (Polycarbonate) and Stainless steel	
Optical face		PMMA	
Cable		PUR	
Mass	_	approx. 20 g Per sensor	
Tightening torque, fastening screws	S	0.25 Nm	
Cable length		2 m	

2 m

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com


Cable length


Approvals and certificates

UL approval CCC approval FDA approval E87056 , cULus Recognized, Class 2 Power Source CCC approval / marking not required for products rated ≤36 V IEC 60825-1:2007 Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

Curves/Diagrams

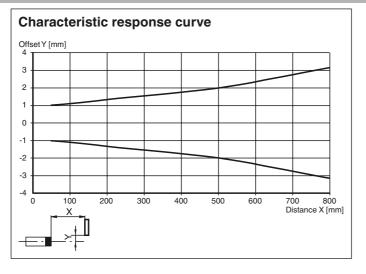

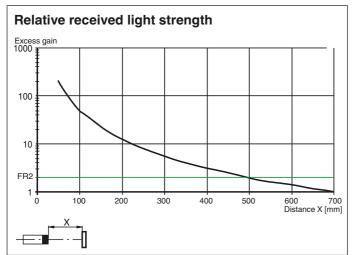

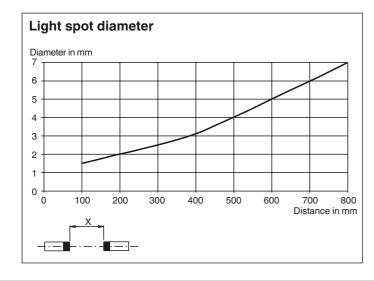

Teach-In Methods

The thru-beam sensor enables the switching points to be taught in for optimum adaptation to specific applications. This eliminates the need for additional components such as apertures.

The sensitivity of the thru-beam sensor can be adjusted using three Teach-in methods:


Position Teach

www.pepperl-fuchs.com

USA: +1 330 486 0001 Germany: +49 621 776 1111 fa-info@us.pepperl-fuchs.com fa-info@de.pepperl-fuchs.com When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to an optimum value
- · The signal threshold is set to a minimum

Signal st Opt		
	Threshold level	
0 -		



Recommended application:

This method enables minuscule particles in the beam path to be detected, and provides exceptional positioning accuracy. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.

- 1. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 2 Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 3. The end of the Teach-in process is indicated when the green LED indicator lights up static and yellow LED blinks.

Two-Point Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to an optimum value
- · The signal threshold is set in the center between the two taught signal values

Signal s	trength		
Max. –			
	Teach-in value 1 (avg)	J	rs P
	Threshold level	> Contrast levels	
	Teach-in value 2 (avg)]	
0 -		•	
0 -		>	

- 1. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.
- Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. 2. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 3. Position the object in the beam path.
- Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. 4.
 - The green and yellow LED indicators flash alternately at 2.5 Hz
- 5. The end of the Teach-in process is indicated when the green LED indicator lights up static.

Maximum Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- · The gain is set to a maximum
- · The signal threshold is set to a minimum

Signal strength			
Max			0
	Threshold level		
0		→	



Enables an object to be detected with a high excess gain. This can be useful if there is severe environmental contamination or to achieve long operating times.

Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.

- 6. Cover the receiver or transmitter.
- 7. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. 8. The green and yellow LED indicators flash alternately at 2.5 Hz
- 9. The end of the Teach-in process is indicated when the green LED indicator lights up static.

Laser notice laser class 1

4

- The irradiation can lead to irritation especially in a dark environment. Do not point at people!
- Maintenance and repairs should only be carried out by authorized service personnel!
- · Attach the device so that the warning is clearly visible and readable.
- The warning accompanies the device and should be attached in immediate proximity to the device.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".				
Pepperl+Fuchs Group	USA: +1 330 486 0001	Germany: +49 621 776 1111	Singapore: +65 6779 9091	
www.pepperl-fuchs.com	fa-info@us.pepperl-fuchs.com	fa-info@de.pepperl-fuchs.com	fa-info@sg.pepperl-fuchs.com	

EPPERL+FUCHS

280473_eng.xml

Date of issue: 2019-05-16

• Caution - Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Pepperl+Fuchs Group www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com