CE **O**IO-Link c(US

Model Number

OBR7500-R101-2EP-IO

Retroreflective sensor with fixed cable

Features

- Miniature design with versatile • mounting options
- Extended temperature range ٠ -40°C ... 60°C
- High degree of protection IP69K .
- IO-link interface for service and • process data

Product information


The miniature optical sensors are the first devices of their kind to offer an end-to- end from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.


20 1 18.3 6.4 6 Emitter M2 (2X) (27.3) 9.95 Receiver 3.3 2000 +50 S

Electrical connection



Dimensions

Indicators/operating means

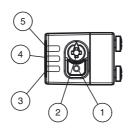

1	Light-on/dark-on changeover switch
2	Sensitivity adjuster
3	Operating indicator / dark on
4	Signal indicator
5	Operating indicator / light on

Pepperl+Fuchs Group

www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001

fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com General specifications Effective detection range Reflector distance Threshold detection range Reference target Light source Light type LED risk group labelling Polarization filter Diameter of the light spot Angle of divergence Ambient light limit Functional safety related parameters MTTF_d Mission Time (T_M) Diagnostic Coverage (DC) Indicators/operating means

Function indicator

Operation indicator

Control elements Control elements Parameterization indicator

Electrical specifications Operating voltage Ripple No-load supply current

Protection class Interface Interface type Transfer rate

IO-Link Revision Min. cycle time Process data witdh SIO mode support

Device ID Compatible master port type Output

Switching type

Signal output

Switching voltage Switching current Usage category Voltage drop

Switching frequency Response time

Conformity

Communication interface Product standard

Ambient conditions Ambient temperature

Storage temperature **Mechanical specifications**

Housing width Housing height Housing depth Degree of protection Connection Material Housing

Optical face

Mass

0...7.5 m 0.03 ... 7.5 m 10 m H85-2 reflector I FD modulated visible red light exempt group ves approx. 65 mm at a distance of 1 m 3.7 EN 60947-5-2

724 a 20 a 0%

UB

In

 U_{d}

LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode Yellow LED: Permanently lit - light path clear Permanently off - object detected Flashing (4 Hz) - insufficient operating reserve Light-on/dark-on changeover switch sensitivity adjustment IO link communication: green LED goes out briefly (1 Hz) 10 ... 30 V DC

max. 10 % < 25 mA at 24 V supply voltage Ш IO-Link (via C/Q = pin 4) COM 2 (38.4 kBaud) 1.1 2.3 ms

Process data input 2 Bit Process data output 2 Bit ves 0x110201 (1114625) A

The switching type of the sensor is adjustable. The default setting is: C/Q - BK: NPN normally open / dark-on, PNP normally closed / light-on, IO-Link /Q - WH: NPN normally closed / light-on, PNP normally open / dark-on 2 push-pull (4 in 1)outputs, short-circuit protected, reverse polarity protected, overvoltage protected max. 30 V DC max. 100 mA . resistive load DC-12 and DC-13 < 1.5 V DC 1000 Hz 0.5 ms IEC 61131-9 EN 60947-5-2 -40 ... 60 °C (-40 ... 140 °F) , fixed cable -25 ... 60 °C (-13 ... 140 °F), movable cable not appropriate for conveyor chains -40 ... 70 °C (-40 ... 158 °F) 13.9 mm 33.8 mm 18.3 mm IP67 / IP69 / IP69K

Accessories

IO-Link-Master02-USB IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

OMH-R101 Mounting Clamp

OMH-R101-Front Mounting Clamp

OMH-4.1 Mounting Clamp

OMH-ML6 Mounting bracket

OMH-ML6-U Mounting bracket

OMH-ML6-Z Mounting bracket

OFR-100/100 Reflective tape 100 mm x 100 mm

RFF-H33 Reflector with screw fixing

REF-H50 Reflector, rectangular 51 mm x 61 mm, mounting holes, fixing strap

REF-H85-2 Reflector, rectangular 84.5 mm x 84.5 mm, mounting holes

REF-VR10 Reflector, rectangular 60 mm x 19 mm, mounting holes

Other suitable accessories can be found at www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

2 m fixed cable

PMMA

approx. 36 g

PC (Polycarbonate)

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091

fa-info@sg.pepperl-fuchs.com

www.pepperl-fuchs.com

Cable length


2 m


Approvals and certificates

UL approval


E87056, cULus Listed, class 2 power supply, type rating 1

Curves/Diagrams

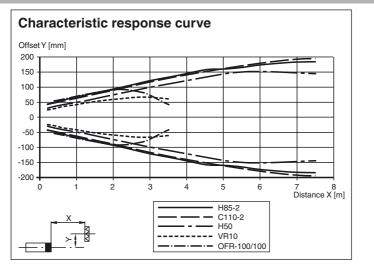

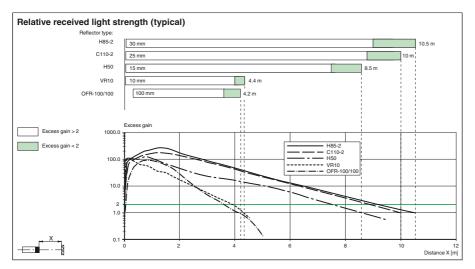

Functions and Operation

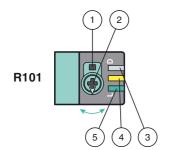

- 1 Light-on / dark-on changeover switch
- 2 Sensing range /sensitivity adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

To unlock the adjustment functions turn the sensing range adjuster for more than 180 degrees.

Sensing Range / Sensitivity

Turn sensing range / sensivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range /sensivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on / dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

267075-100013_eng.xml	
ate of issue: 2019-03-26	т 9 т т
Release date: 2019-03-26 09:57 D	li F e li c
	Refe Pep

tefer to "General Notes Relating to Pepperl+Fuchs Product Information".							
Pepperl+Fuchs Group	USA: +1 330 486 0001	Germany: +49 621 776 1111	Singapore: +65 6779 9091				
ww.pepperl-fuchs.com	fa-info@us.pepperl-fuchs.com	fa-info@de.pepperl-fuchs.com	fa-info@sg.pepperl-fuchs.com				

Restore Factory Settings

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensivity adjustment is locked. In order to reactivate the sensing range / sensivity adjustment, turn the sensing range / sensivity adjuster for more than 180 degrees.