Dimensions



c(UL)us VISCO ECOLAB

Model Number

ML7-8-200/25/103/115

Diffuse mode sensor with 2 m fixed cable


Features

CE

- Miniature design ٠
- Automatic adjustment of sensitivity ٠ via TEACH-IN
- Clearly visible function indicators ٠
- Flashing power on LED in case of • short-circuit
- Not sensitive to ambient light .
- Protected against mutual interference • (no cross-talk)


Product information

Small, robust, effective, and reliable - these are the properties of the ML7 sensor series. Due to their small size, number of versions, and two different lens positions, they are particularly suited for installation in tight spaces. The robust design and high quality of Pepperl+Fuchs mean they can also be used under harsh environmental conditions. The efficient technology, switching frequencies up to 1000 Hz, high resistance to ambient light, and 4-in-1 output make the series suitable for non-contact object detection.

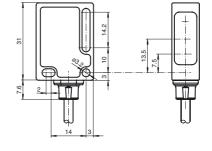




Electrical connection

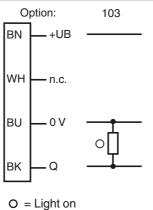

= Dark on

Indicators/operating means

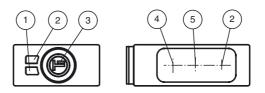

1	Operating display	green
2	Signal display	yellow
3	TEACH-IN button	
4	Emitter	
5	Receiver	

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Pepperl+Fuchs Group www.pepperl-fuchs.com

fa-info@us.pepperl-fuchs.com

Technical data

MTTF_d

Ripple

Output

Material

Mass


ves

Accessories

General specifications Montagekit OMH-ML7-01 20 ... 200 mm Detection range Mounting set consisting of bracket OMH-Adjustment range 60 ... 200 mm ML-01 sheet OMH-ML7-03, and fastestandard white, 100 mm x 100 mm Reference target ning material Light source LED modulated visible red light Light type Montagekit OMH-ML7-02 Diameter of the light spot approx. 15 mm at a distance of 200 mm Mounting set consisting of bracket OMH-Angle of divergence approx. 4.5 ML-02 sheet OMH-ML7-03, and faste-Ambient light limit 40000 Lux ning material Functional safety related parameters 1610 a OMH-ML7-01 Mission Time (T_M) 20 a Mounting bracket Diagnostic Coverage (DC) 0 % **OMH-ML7-02** Indicators/operating means Mounting bracket Operation indicator LED green, flashes in case of short-circuit Function indicator LED yellow, lights up with receiver lit OMH-ML7-03 Control elements Teach-In key Fixing plate **Electrical specifications** 10 ... 30 V DC , class 2 Operating voltage UB Other suitable accessories can be found at max. 10 % www.pepperl-fuchs.com < 20 mA No-load supply current I_0 Switching type light on 1 PNP output, short-circuit protected, reverse polarity protected, Signal output open collector max. 30 V DC Switching voltage Switching current max. 100 mA Voltage drop Ud ≤ 1.5 V DC Switching frequency 1000 Hz f Response time 0.5 ms Ambient conditions Ambient temperature -20 ... 60 °C (-4 ... 140 °F) -40 ... 75 °C (-40 ... 167 °F) Storage temperature **Mechanical specifications** IP67 / IP69K Degree of protection Connection 2 m fixed cable Housina PC (glass-fiber-reinforced Makrolon) Optical face PMMA approx. 50 g Compliance with standards and directi-Standard conformity EN 60947-5-2:2007 Product standard IEC 60947-5-2:2007 EN 50178, UL 508 Standards Approvals and certificates Protection class II, rated voltage ≤ 250 V AC with pollution degree 1-2 according to IEC 60664-1 cULus

UL approval CCC approval

Curves/Diagrams

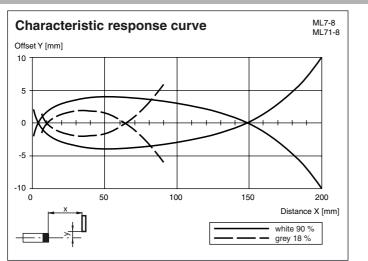

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

CCC approval / marking not required for products rated ≤36 V

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



www.pepperl-fuchs.com

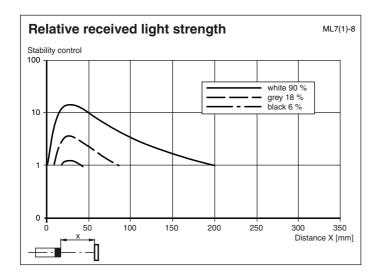

TEACH-IN

Connect the sensor to operating voltage, the LED green lights up constantly. The sensor operates at max. sensitivity (delivery status) or with the last teached values.

- · Adjust the unit to the target.
- Press the TEACH-IN button as an acknowledge the green LED will switch off shortly for one time.
- Press the TEACH-IN button until both LED's green and yellow are blinking in parallel (2Hz). Release the TEACH-IN button now.
- While the green and yellow LEDs are blinking alternating (2Hz) the unit is in the internal set up procedure.
- TEACH-IN successful: Both LEDs green and yellow are on. The unit is ready to use and in switching mode now.
- TEACH-IN not successful: Both LEDs are flashing alternating (4Hz) for approx. 5 seconds. Afterwards the sensor returns to max. sensitivity setting. Please retry the TEACH-IN procedure beginning by step 1.

