

CE 🚷 IO-Link

Model Number

OBD1400-R201-2EP-IO-0,3M-V1

Diffuse mode sensor

with fixed cable and M12 connector, 4-pin

Features

- Medium design with versatile • mounting options
- Extended temperature range ٠ -40°C ... 60°C
- High degree of protection IP69K .
- IO-link interface for service and • process data

Product information


The optical sensors in the series are the first devices to offer an end-to-end solution in a medium-sized standard design-from the thru-beam sensor through to the measuring distance sensor. As a result of this design, the sensors are able to perform practically all standard automation tasks.


The entire series enables sensors to communicate via IO-Link.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.


Multi Pixel Technology (MPT) ensures that the standard sensors are flexible and

can be adapted to the application environment.

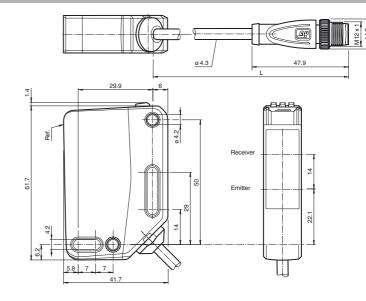

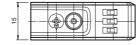

Electrical connection




Dimensions





Indicators/operating means



1	Sensitivity adjustment	
2	Light-on / dark-on changeover switch	
3	Operating indicator / dark on	GN
4	Signal indicator	YE
5	Operating indicator / light on	GN

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Technical data

General specifications

Detection range min.

Detection range max.

LED risk group labelling

Angle of divergence

Ambient light limit

Function indicator

Control elements

Control elements

Protection class

Device profile

Transfer rate

IO-Link Revision

Process data witdh

SIO mode support

Compatible master port type

Device ID

Signal output

Switching voltage

Switching current

Switching frequency

Communication interface

Usage category

Response time Conformity

Product standard

Ambient conditions Ambient temperature

Storage temperature **Mechanical specifications**

Degree of protection Connection

www.pepperl-fuchs.com

Housing width

Housing height

Housing depth

Optical face

Material Housing

Mass

Voltage drop

Output Switching type

Min. cycle time

Ripple

Interface Interface type

Electrical specifications Operating voltage

No-load supply current

Diameter of the light spot

Diagnostic Coverage (DC) Indicators/operating means Operation indicator

Adjustment range

Reference target

Light source

Light type

MTTF_d Mission Time (T_M)

Detection range

Accessories IO-Link-Master02-USB 2 ... 1400 mm IO-Link master, supply via USB port or 100 ... 200 mm separate power supply, LED indicators, 2 ... 1400 mm M12 plug for sensor connection 200 ... 1400 mm standard white, 100 mm x 100 mm V1-W-2M-PUR LED Female cordset, M12, 4-pin, PUR cable modulated visible red light exempt aroup V1-G-2M-PUR approx. 50 mm at a distance of 1400 mm Female cordset, M12, 4-pin, PUR cable 2 Other suitable accessories can be found at EN 60947-5-2 : 60000 Lux www.pepperl-fuchs.com Functional safety related parameters 724 a 20 a 0% LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode LED yellow: constantly on - object detected constantly off - object not detected Light-on/dark-on changeover switch Sensing range adjuster U_B 10 ... 30 V DC max. 10 % I_0 < 18 mA at 24 V Operating voltage Ш IO-Link (via C/Q = pin 4) Identification and diagnosis Smart Sensor type 2.4 COM 2 (38.4 kBaud) 1.1 2.3 ms Process data input 1 Bit Process data output 2 Bit ves 0x111111 (1118481) А The switching type of the sensor is adjustable. The default setting is: C/Q - Pin4: NPN normally open / light-on, PNP normally closed / dark-on, IO-Link /Q - Pin2: NPN normally closed / dark-on, PNP normally open / light-on 2 push-pull (4 in 1)outputs, short-circuit protected, reverse polarity protected, overvoltage protected max. 30 V DC max. 100 mA . resistive load DC-12 and DC-13 < 1.5 V DC U_{d} 1000 Hz 0.5 ms IEC 61131-9 EN 60947-5-2 -40 ... 60 °C (-40 ... 140 °F) , fixed cable -20 ... 60 °C (-4 ... 140 °F) , movable cable not appropriate for conveyor chains -40 ... 70 °C (-40 ... 158 °F) 15 mm 61.7 mm 41.7 mm IP67 / IP69 / IP69K 300 mm fixed cable with M12 x 1, 4-pin connector

Date of issue: 2018-12-17 295670-100059_eng.xml Release date: 2018-12-17 14:44

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

PC (Polycarbonate)

PMMA

approx. 55 g

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



2

Cable length


CCC approval

Approvals and certificates


UL approval


E87056 , cULus Listed , class 2 power supply , type rating 1 CCC approval / marking not required for products rated ${\leq}36~V$

Curves/Diagrams

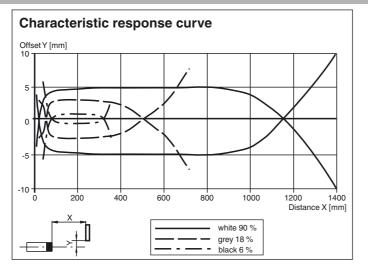

0.3 m

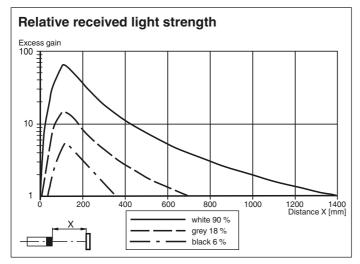

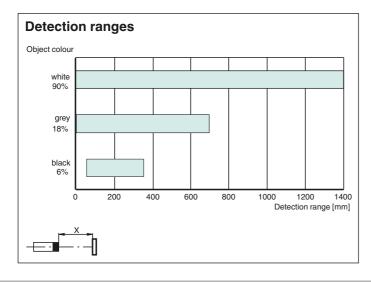

Functions and Operation

To unlock the adjustment functions turn the sensing range /sensitivity adjuster for more than 180 degrees.

Sensing Range / Sensitivity

Turn sensing range / sensitivity adjuster clockwise to increase sensing range / sensitivity.



Turn sensing range / sensitivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on /dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

Restore Factory Settings

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensitivity adjustment is locked. In order to reactivate the sensing range / sensitivity adjustment, turn the sensing range /sensitivity adjuster for more than 180 degrees.

4

